Installation manual

NT.1400.04W.SS

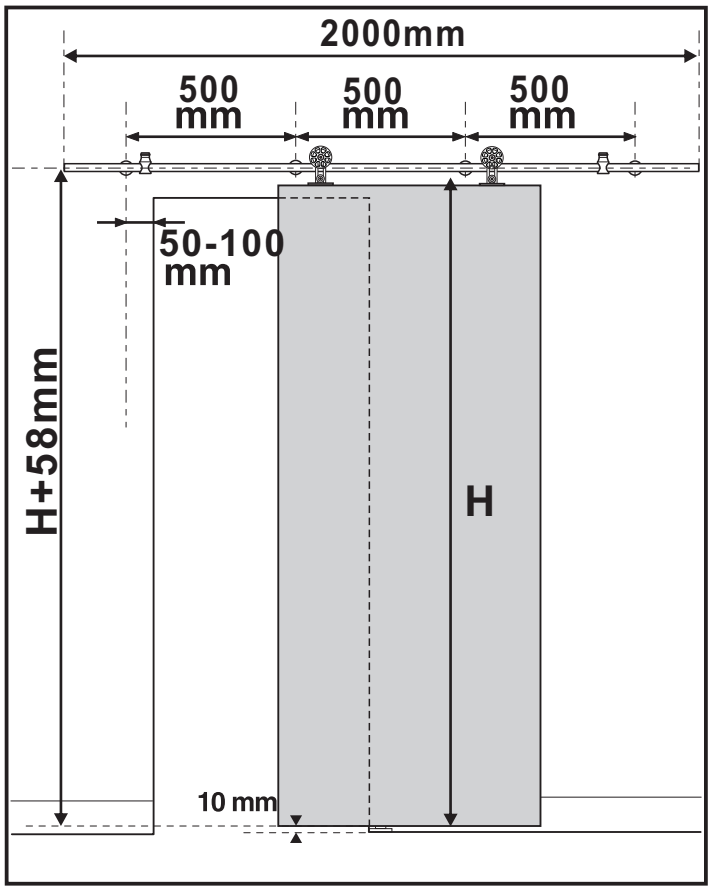

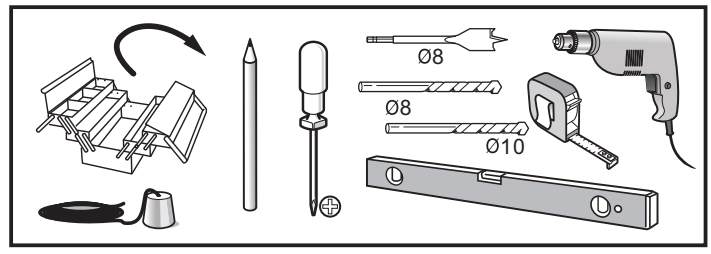

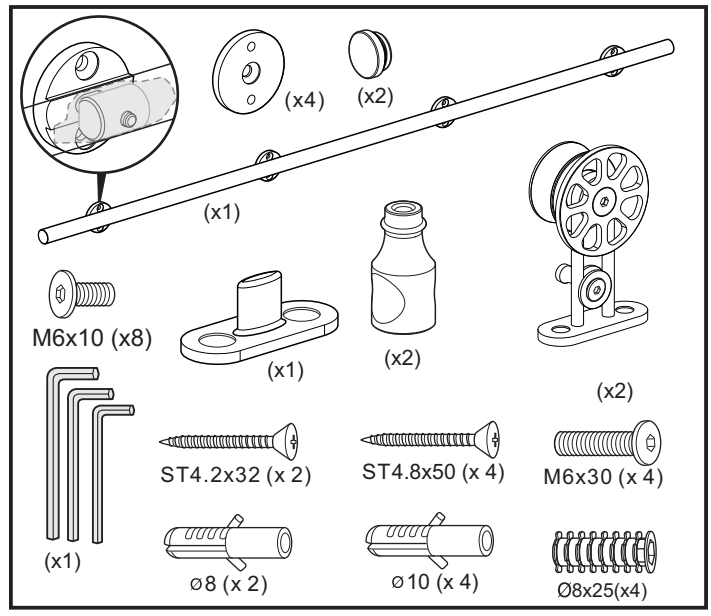

To obtain the maximum weight capacity, all fasteners must be mounted securely into solid wood of studs or blocking within the wall or wood mounted to the face of the wall.

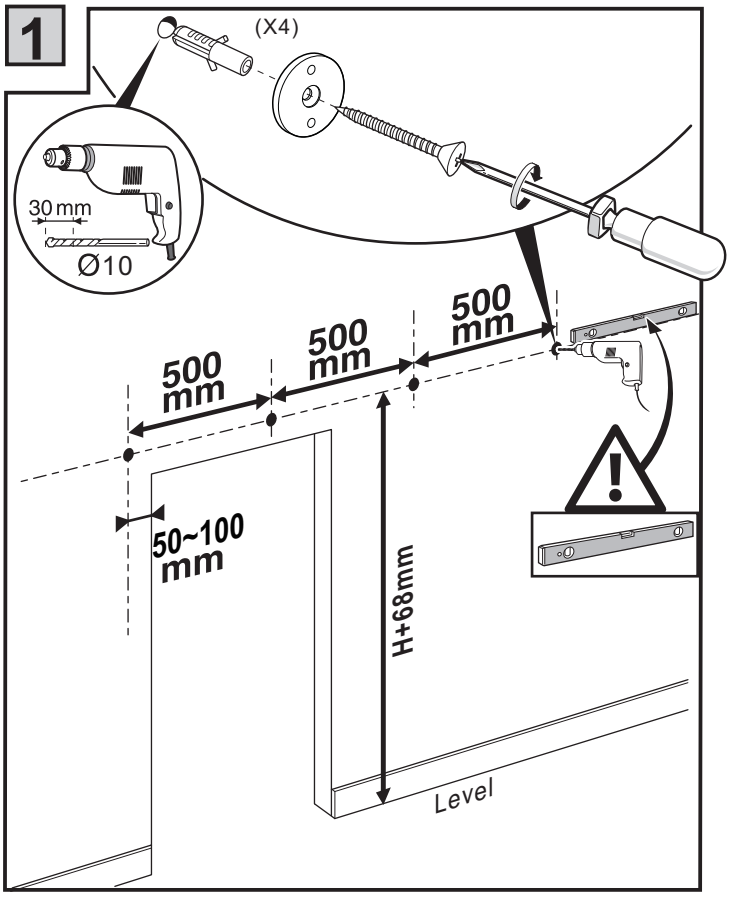

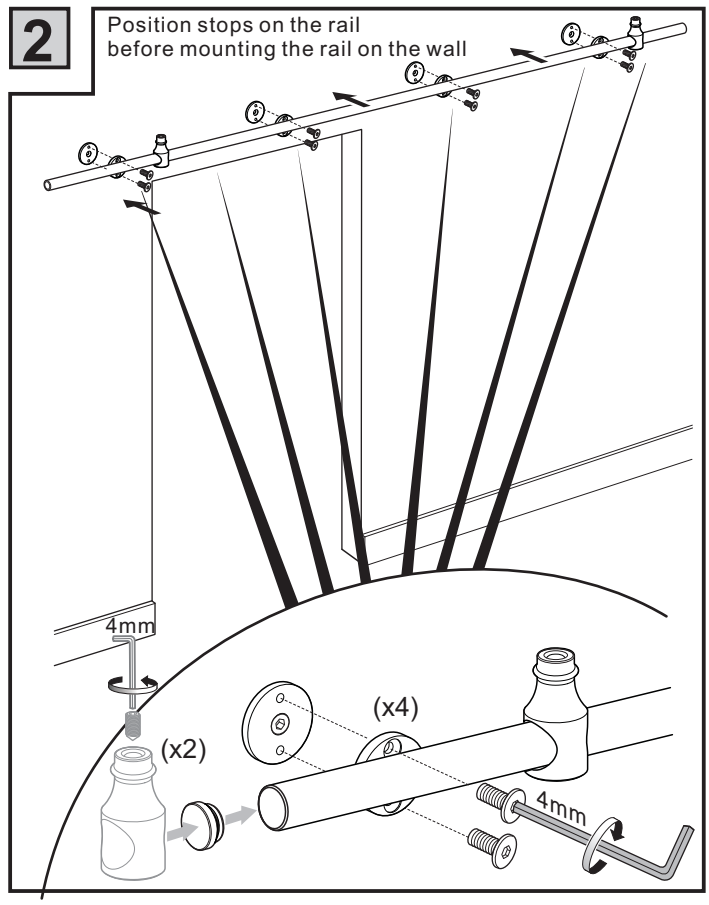

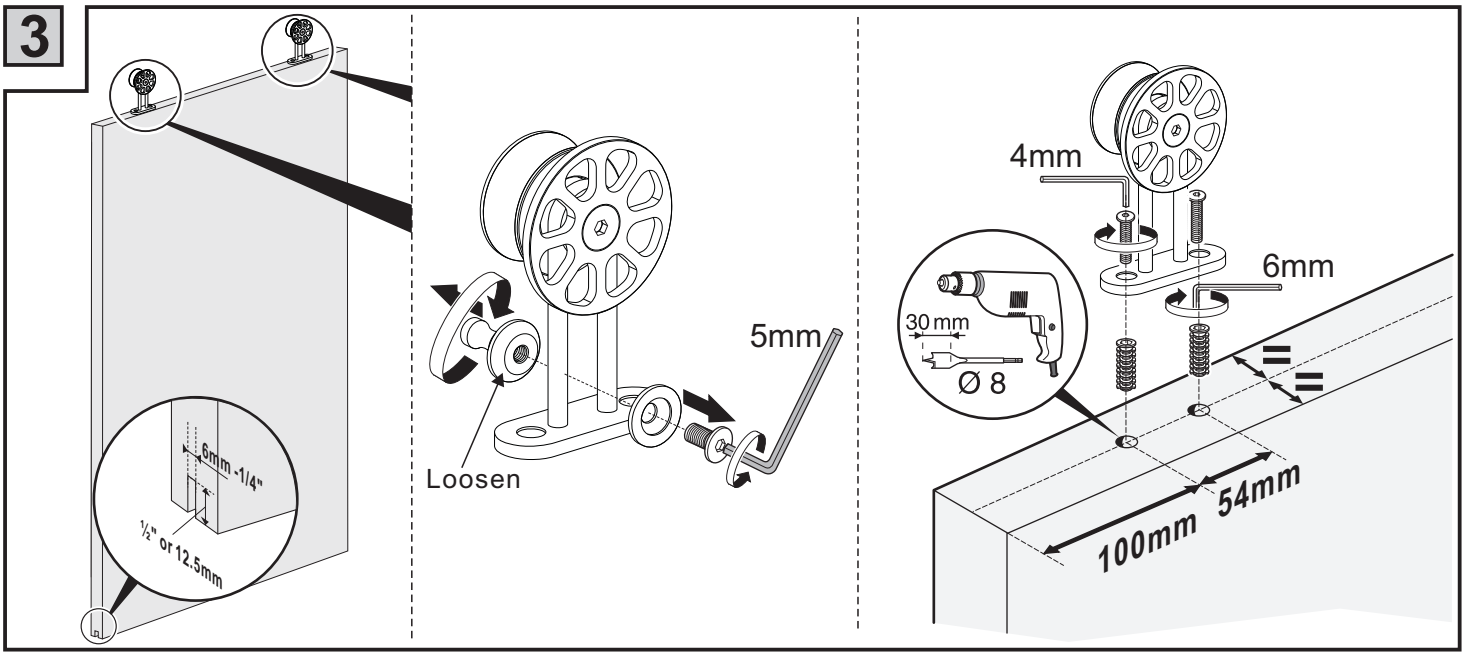
3
6mm -1/4"
½" or 12.5mm
Loosen
5mm
4mm
6mm
30 mm
Ø 8
100mm
54mm

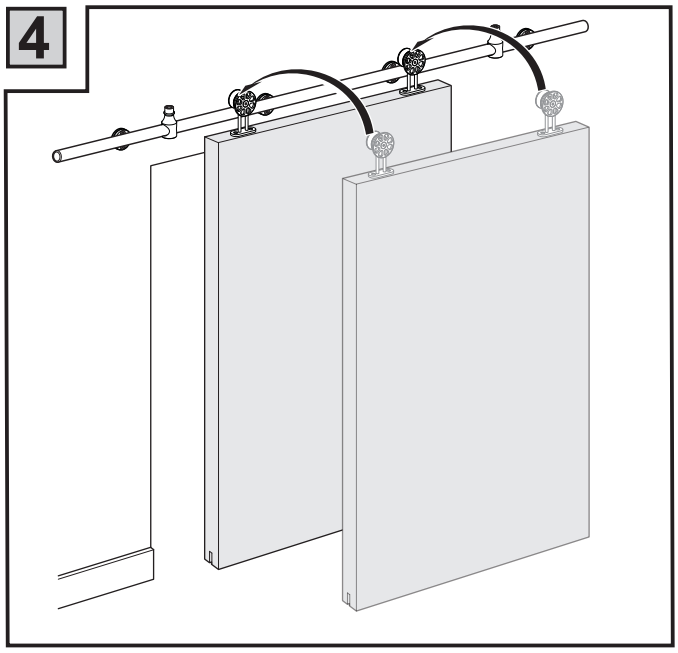
4

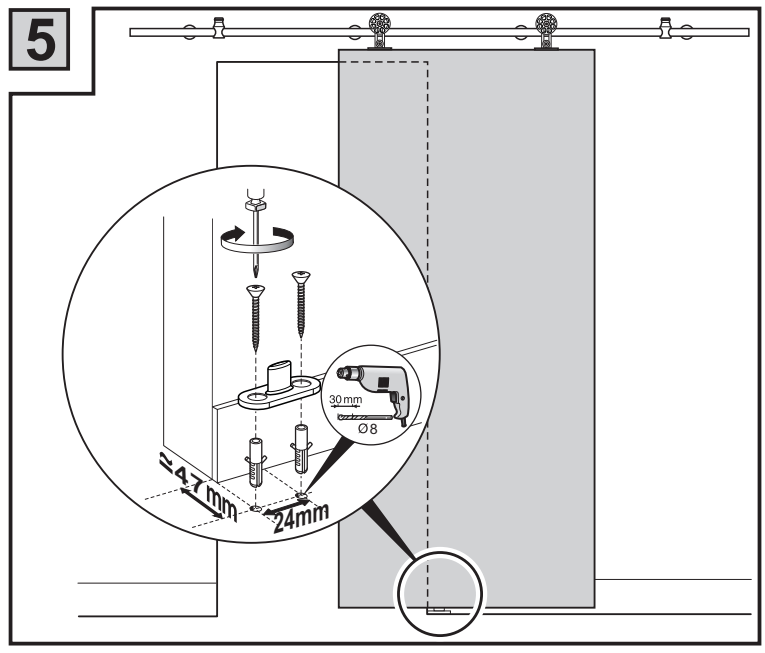
5
30 mm
Ø8
≃4.7mm
24mm

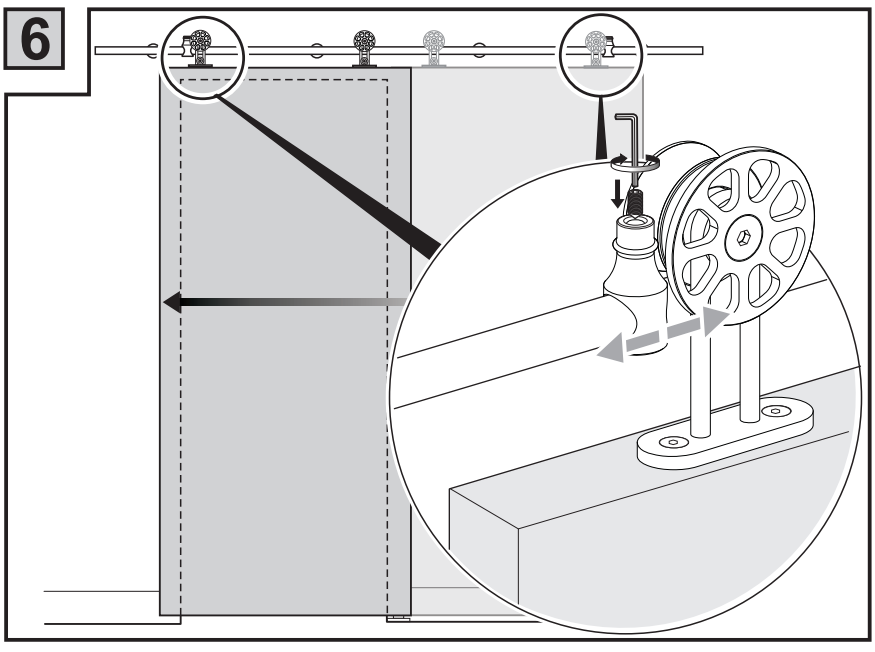
6

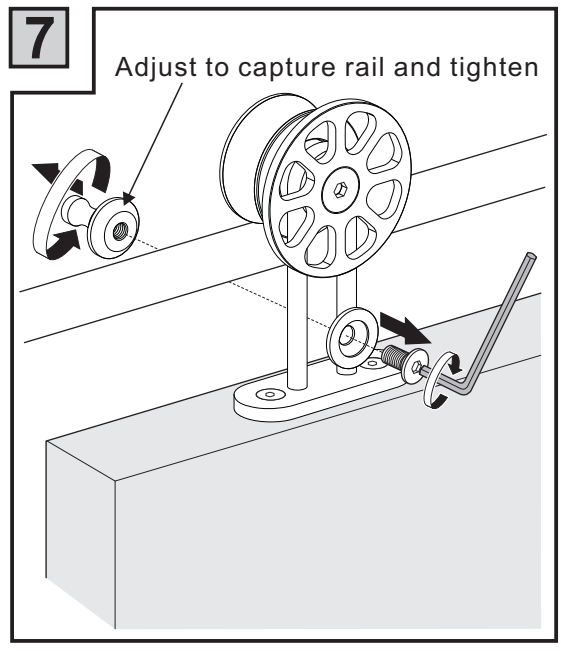
7
Adjust to capture rail and tighten